

Programming Your Remote Control to your Set Top Box and TV



Amino (140, 540)



IS-5112W and IS-5041



ADB



Kamai 7

Program the Remote to Your STB & TV Backlit Remote

- 1 Press **STB**
- 2 Press and Hold **SETUP** until STB blinks twice
- 3 Enter the STB code:

Amino	1898
ADB	2254
Innovative (IS)	1376
Kamai	4437

STB will blink twice to confirm the code is stored

- 1 Power the TV on
- 2 Press **TV**
- 3 Press and Hold **SETUP** until the **TV** key blinks twice
- 4 Enter **9 9 1**
- 5 Press and release **CH+** until the TV powers off
- 6 Press **SETUP** to save the code

Follow the remote programming instructions for master power on side 2 to continue.



Program the Remote to Your STB & TV Royal Remote

- 1 Press **CABLE POWER**
- 2 Hold **SET UP**, plus the colored hotkey, until **CABLE POWER** blinks twice

Colored Hot Keys:

Amino 140/540	Yellow (A)
Innovative (IS) 5112/5041	Blue (B)
ADB 3800/3721	Red (C)
Kamai 7	Green (D)

- 1 Power the TV on
- 2 Press and hold **SET UP** until **CABLE POWER** blinks twice
- 3 Press **TV POWER**
- 4 Press and Hold **OK** until the TV shuts off, release **OK**
(May take up to one minute and the **CABLE POWER** key will flash)



Programming Your Remote Control to your Set Top Box and TV

Program the Master Power Control

Backlit Remote Only

This eliminates the need to press the “STB” and “TV” when turning on the TV.

- 1 Make sure the TV is on
- 2 Press **STB**
- 3 Press and hold **SETUP**, STB will blink twice
- 4 Press **9 9 5**, STB will blink twice
- 5 Press **POWER**
- 6 Press **TV**
- 7 Press **STB**
- 8 Press and hold **SETUP**, until STB blinks twice

Backlit Remote



Step-by-Step Guide to Programming Your New Remote

The Big Button remote control is already pre-programmed to control Amino Set Top Boxes (STB), shown here:

[Amino](#)



If you have an Amino STB, skip the instructions on this page and proceed with both sets of instructions on the back side of this page. This process must be done for every STB in your home.

If you have any of the ADB Set Top Boxes shown below, you will have to reprogram the remote control using the instructions on this page. Repeat process for every ADB STB in your home.

[ADB 3800](#)



[ADB 3721](#)



[ADB 5721](#)



1. Press the **STB** button **and** the **OK/SEL** button simultaneously for 3 seconds.
2. Press **2 5 9**. The STB button will blink twice.
3. Press the **STB** button to save.



1

Program the Remote to Your TV

1. Make sure the **TV** is on.
2. Press and hold the **TV** key **AND** the **OK/SEL** key for 3 seconds - the **TV** key will stay lit.
3. Press and hold **Ch↑** key until the TV powers off.
4. Release the **CH↑** key and press the **TV** key to save the code.

Big Button



2

Program the Master Power Control

This eliminates the need to press the “STB” and “TV” buttons when turning on the TV.

1. Make sure the TV is on.
2. Press **STB**.
3. Press and hold the **OFF** key **AND** the **OK/SEL** key for 3 seconds.
4. Press **STB**.
5. Press **OFF**.
6. Press **TV**.
7. Press **OFF**.
8. Press and hold **Ch↑** to save command - STB key will blink twice.

Program the Remote to Your Other Devices (AUD, DVD, VCR)

The AUD, DVD and VCR mode keys have a default setting which means they are automatically set to the STB. If you would like to program these mode keys to your devices, please follow the instructions below to lock the default setting.

1. Press and Hold **SETUP**, until the mode key blinks twice.
2. Type **9-9-2**.
3. Press the **mode** key, AUD, DVD or VCR you desire to program, twice.
4. This will remove the STB mode and a new Audio, DVD or VCR code can now be programmed.
5. Manually turn **ON** the device that you want to setup on the remote.
6. Press and release the **mode** key for the device you are programming, it will blink once.
7. Press and Hold **SETUP**, until the mode key blinks twice.
8. Press and release the **mode** key. The mode key will stay lit.
9. Find your AUD, DVC or VCR device brand for the chart (contact NDTC) and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand while pointing the remote to the device.
10. Let go of the key when your device turns OFF. Setup for that device is complete.

