



USER GUIDE


AMAZON FIRE TV DEVICES

For 24/7 tech help, call NDTCTC at 662.1100 or check out our video tutorials at gondtc.com/NDTCTV+

GETTING STARTED

ADDING NDTC TV+ TO YOUR AMAZON FIRE DEVICE





To add NDTC TV+ to your Amazon Fire device, press the Home button  and navigate to search and use the on-screen keyboard to type in NDTC TV+ and then highlight the magnifying glass and press the center of the remote ring . The app will appear under Apps &Games.

Tip: You can also use Voice Search to enter NDTC TV+.

Select and click the Get button to download the App. Once the installation is completed, you will be prompted for a Login and Passphrase, which was provided by email from ndtc.tv@gondtc.com.

NAVIGATING FIRE DEVICE APP CONTENT AND LISTS

Pressing left, right, up, or down on the remote circle will highlight specific items. Pressing in the center of the remote circle will open a highlighted item. To return to the Home Screen, press the Home button  Press the Back button  to move back to the previous screen.



WATCHING YOUR NDTC TV+ STREAMING TV

From the Home Screen, use the remote to highlight and expand the NDTC TV+ icon and press the center of the remote ring, (SELECT). This action will open your on-screen Program Guide.

To watch a channel, press up or down on the remote ring, (NAVIGATION) to any program highlighted in **Blue** and press the center of the remote ring. This will open a program screen with detailed information about the program. This screen will display Watch (If it is a currently airing program), Record, and Search options.

To watch a currently airing program, use your remote to highlight the Watch button and press the center of your remote ring. To Record a program, highlight the Record button, and press the center of the remote ring. (See the Recording Your Programs section on page 5 of this guide to learn more about recording programs.) Choose the Search feature if you want to see future dates and times that this program will air or programs that have been recorded or scheduled for recording.



ENTER CHANNEL NUMBER FEATURE

From the Program Guide, press and hold the center of your remote ring to open a screen that allows you to enter a specific channel number and then select Next to move to that channel number in the Program Guide.


CHANNEL SURFING

While watching a currently airing program, press the top of the remote circle to view the next higher numbered channel. Press the bottom of the remote circle to view the next lower numbered channel.





TAB BAR

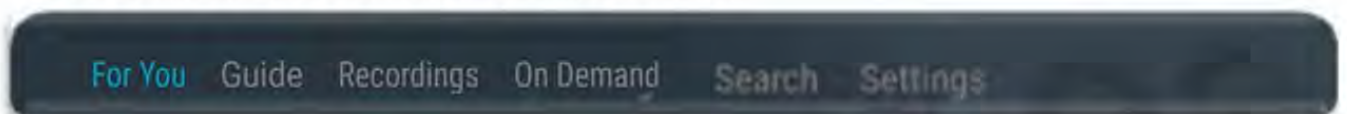From the Program Guide, press the Back button (left arrow) on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the For You, Guide, Recordings, On Demand (If offered it will display), Search, and Settings options.



 
PAUSE LIVE TV

While watching live TV, press the Play/Pause button  on your remote once to pause the program. To continue watching, press the Play/Pause button  once. You can also pause your recorded programs while they are playing using this feature.




RESTART TV

This popular feature lets you go back to the beginning of any currently-airing or in-progress recorded program that has the Restart option. Programs that have the Restart option display a Green Restart icon in the program description. From an in-progress program on your TV screen, press the center of the remote ring to open a Video Options window, highlight Start Over. This will restart the program from the beginning.

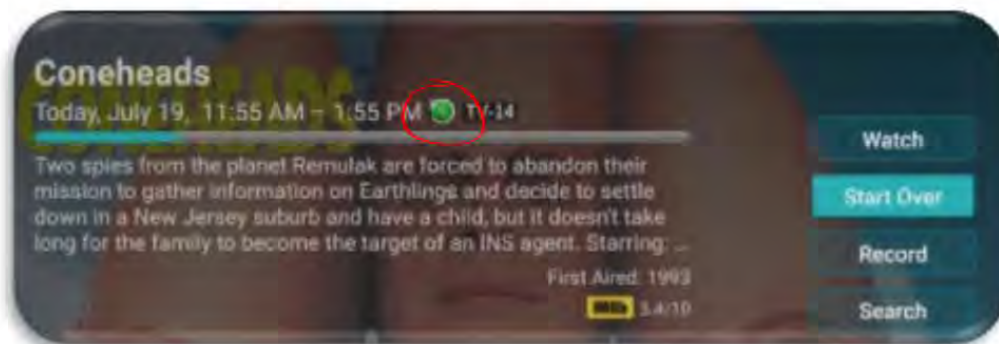


QUICK GUIDE



During a recorded or live program press the Menu button  to pull down a menu list of your most recently watched channels. Scroll left or right to choose a new channel and press the center of your remote ring to watch it.



FOR YOU


For You gives you quick access to Channels You have Watched, Channels Popular in Your Area, Recordings, and even the Weather. From the Program Guide, press the Back button  on the remote to open the Tab bar, use the remote ring to select the For You Option. Again, use your remote ring to navigate through and select what you would like to watch.

FAST FORWARD AND REWIND FEATURES


There may be times when you want to go back and see that exciting play in the game. To use this feature during an in-progress or recorded program, press the Fast Forward button  on your remote control to advance the program, and press the Rewind button  to go back. The Progress Bar lets you track your movement through a program, and the timer helps you to see how far you are from the end of the program.



CLOSED CAPTIONING

To turn on CC while a program is playing, press the Play/Pause button  and press the bottom of the remote ring until the CC icon is highlighted. You can then press the center of your remote ring to activate CC. Follow the same steps to deactivate the CC feature.

PROGRAM SEARCH FEATURE

You can use the Search feature to find Live, Recorded, and Future programs. From the Program Guide, press the Back button  to open the Tab Bar, scroll to the Search feature, press on the lower part of the remote ring, and then press the right side of the remote ring to open a typing pad. You can manually type in a program search by typing in letters of a program for which you are searching. To use the voice search, press and hold the Microphone button while saying the name of the program you are looking for.

Note: The typing pad must be visible when doing a voice search with the microphone.

The results will be specific if you type in or pronounce more letters in the name of the program. You can also use the search feature to find specific types of programs, like a program with the name “Today” in the title. To view your search results, highlight Next on the keypad and press the center of your remote ring. The search results will show currently airing or upcoming programs in the top row of the TV list.



Highlight a program, select the Watch button to view the program or select Record to add this program to your future recordings. The bottom row will show programs that have been recorded or future recordings. Highlight a recorded program you want to watch and press the center of the remote ring to watch the program. You can also select Delete if you want to remove the program from your recordings.

RECORDING YOUR PROGRAMS

MAKING A RECORDING

When you select a program and then select Record, a screen will display that gives you the options for setting a Recording Series Rule for this program. You can record only new episodes (Series - New Only), record all episodes of this program (Series - All), or a One-Time recording of this program. Check out the Series Rules section on page 6 of this guide to learn how to manage your Series Recordings.



RECORDING PROGRAMS FROM THE GUIDE

Select an upcoming or currently airing program, press the center of the remote ring, highlight the Record button and press the center of remote ring again to make a recording of this program.

WATCHING YOUR RECORDINGS

Recordings can be viewed from either the Recordings or Search screen options. Select Recordings from the Tab Bar to open the Recordings screen. Here you will see a list of your Current Recordings, Future Recordings, and Series Rules. Scroll through




the list of Current Recordings, highlight the program you want to watch, and press the center of the remote ring to start watching the program. If there are multiple recordings, scroll and highlight the one you want to watch and press the center of the remote ring to start watching the program.

Selecting the Search option will display a list in Recordings of programs. Press the center of the remote ring, highlight Watch and press the center of the remote ring to start watching the program. Note: The typing pad must be visible when doing a voice search with the microphone.



MANAGE YOUR RECORDINGS

From your list of current recordings, if you have started watching a program, you have the options to Resume or Start Over. Highlight your choice and press the center of the remote ring to watch the program. The Search feature will display upcoming air dates of the live programs (on TV) and your scheduled future Recordings for that program or series.

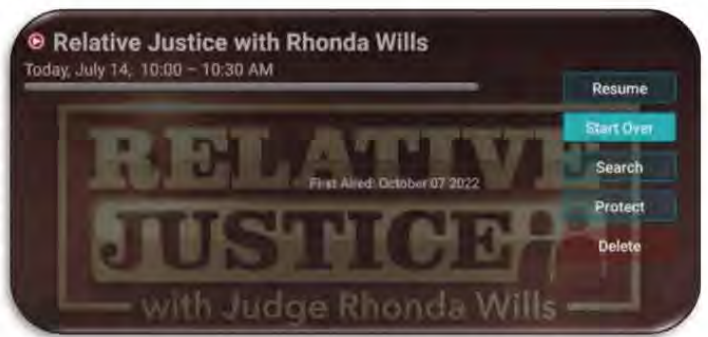

To protect a recorded program from being accidentally deleted, choose the Protect option and press the center of the remote ring. To unprotect a program, highlight and press the center of the remote ring to Unprotect the program.


You can delete a recorded program by highlighting the Delete option. If you choose to delete a program, you will receive a prompt asking you to Delete Recording. Highlight Delete and press the center of the remote ring.

MANAGE SERIES PROGRAM RECORDINGS WITH SERIES RULES

Use the Series Rules feature to manage the episodes of a series that you want recorded automatically. From the Recordings screen, press the bottom of your remote control till you have highlighted Series Rules to see a list of series programs you have scheduled for recording.

Scroll through the list and highlight and press the center of the remote ring to select a series that you want to manage. Highlight Edit and press the center of the remote ring to open a Series Rules Options screen.

Use your remote to navigate and select Recording Type - you can choose between Only New Episodes or All Episodes. The next option is Keep At Most - you can choose a maximum number of episodes that you want to keep of this series.

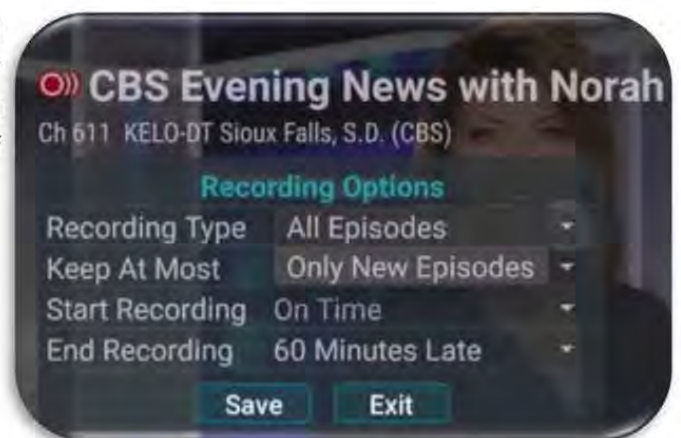

Start Recording or End Recording options allow you to manage in minutes the start or end times for the series recordings, earlier or later than their originally scheduled times. This feature is particularly useful for sports events that can run past their scheduled end times

You can delete the Series Rules for a program, by highlighting the Delete button and pressing the center of the remote ring. This deletes any future recordings of this series but does not delete the existing Series Recordings.

ADDING DEVICES TO YOUR SERVICE

Before you add a new device to this service, go to Settings in your Tab Bar from an activated device, and press the Down arrow of the remote to highlight Manage Account, and then press OK on your remote. Press the Down arrow until you highlight Add Device, then press Ok to generate a Login and Passphrase for the new device. Follow the directions at the beginning of this guide for adding this service to your new Firestick device and use the displayed Add Device Login and Passphrase when you are prompted to activate the service.

